 


# ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

 
---

ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

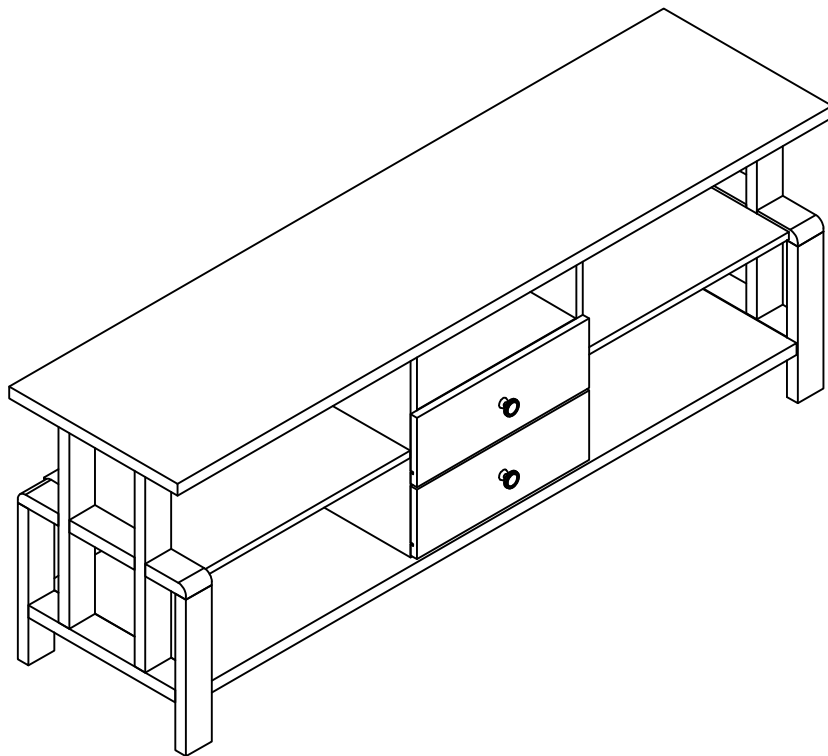

# ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

 

 


 
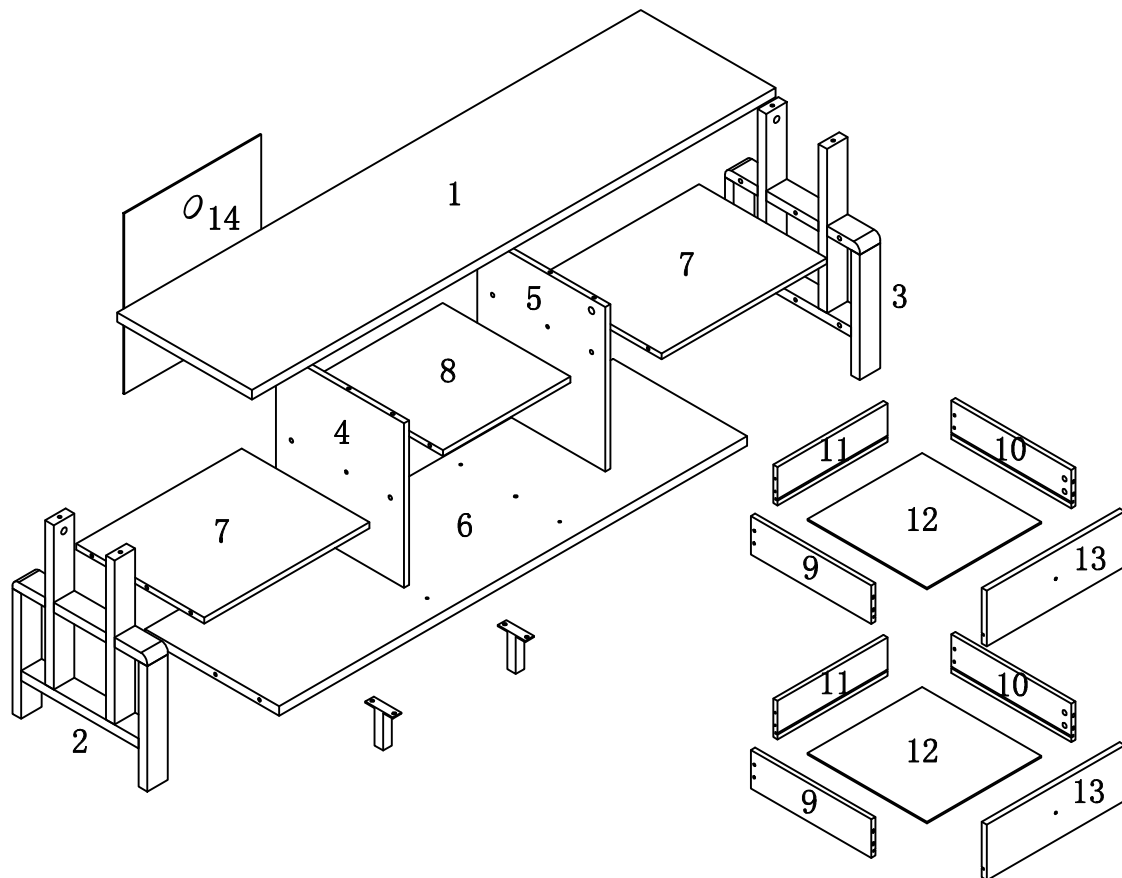 




 

 

ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688



(1)	1pc	(6)	1pc	(11)	2pcs
(2)	1pc	(7)	2pcs	(12)	2pcs
(3)	1pc	(8)	1pc	(13)	2pcs
(4)	1pc	(9)	2pcs	(14)	1pc
(5)	1pc	(10)	2pcs		

# ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

 
ITEM NO/NO ARTICLE: TV stand/Meuble TV  
192688

A		L29	24pcs
B		ø15	24pcs
C		L20	8pcs
D		ø12	8pcs
E		ø8x25	12pcs
F		ø4x30	8pcs
G		ø4x50	4pcs
H			2pcs
I		M4x20	2pcs
J		M6x12	4pcs
K			20pcs
L		ø22	20pcs
M		ø16	4pcs
N		80x25x97	2pcs
O			1pc

Glue: For securing please apply to wood dowel first before inserting into panel


ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

---

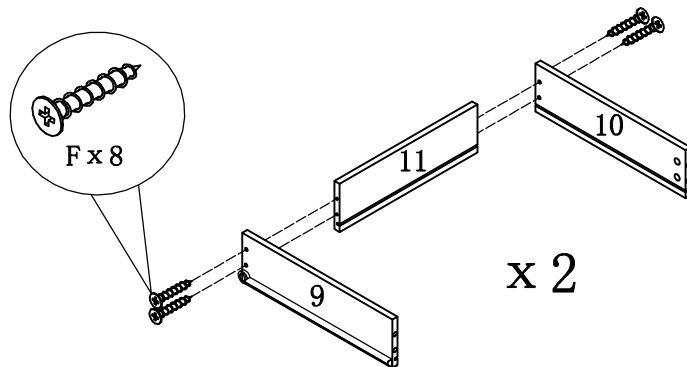


STEP 1 / ETAPE 1

 STEP 2 / ETAPE 2

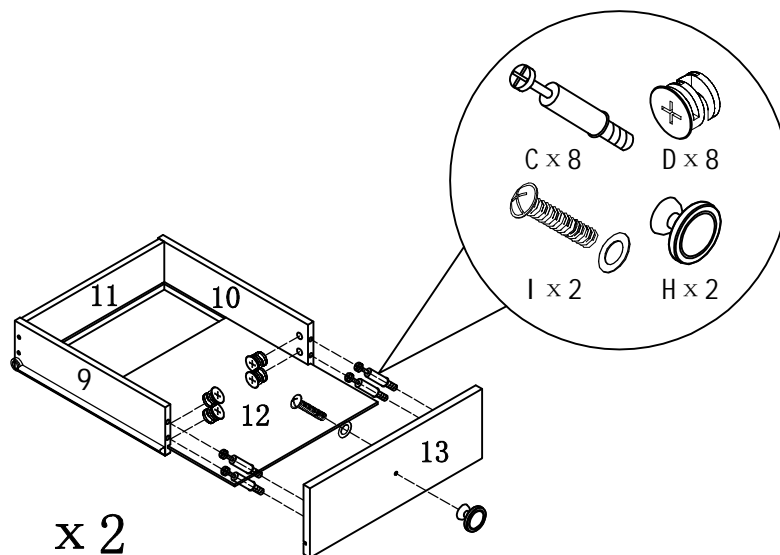


ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

 ---

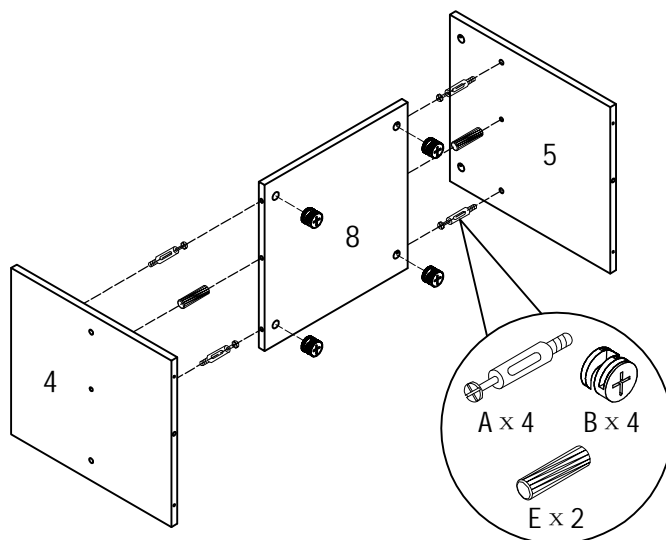


STEP 3 / ETAPE 3

 STEP 4 / ETAPE 4

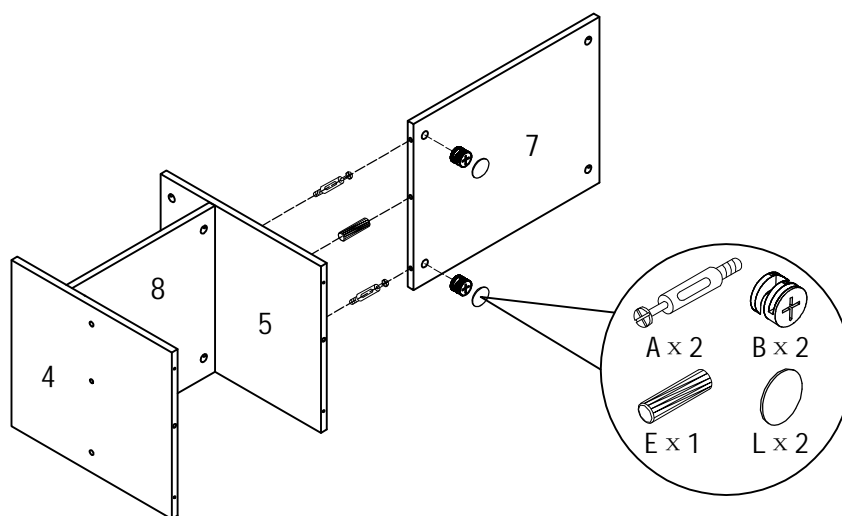


ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

 ---

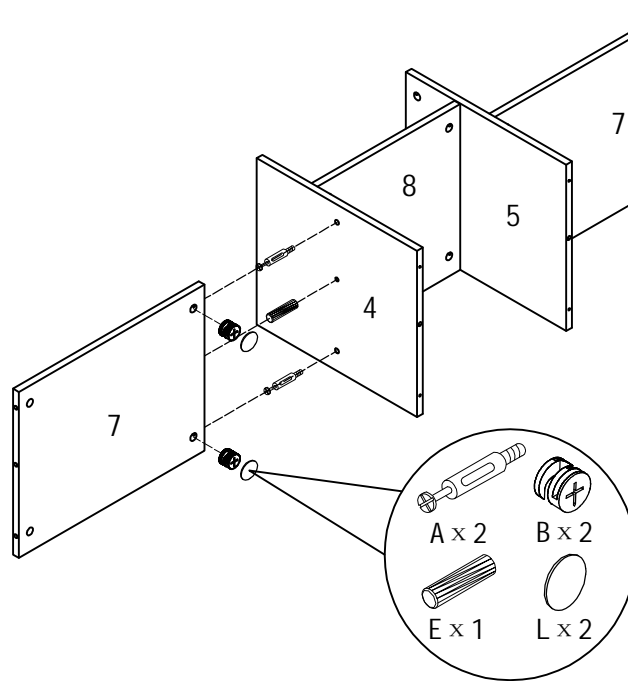


STEP 5 / ETAPE 5

 STEP 6 / ETAPE 6

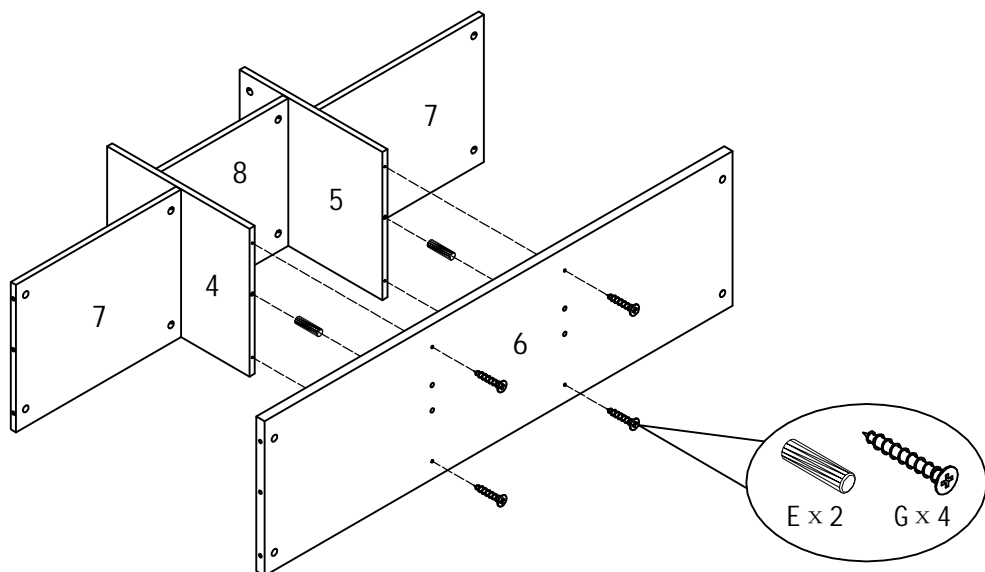


 ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

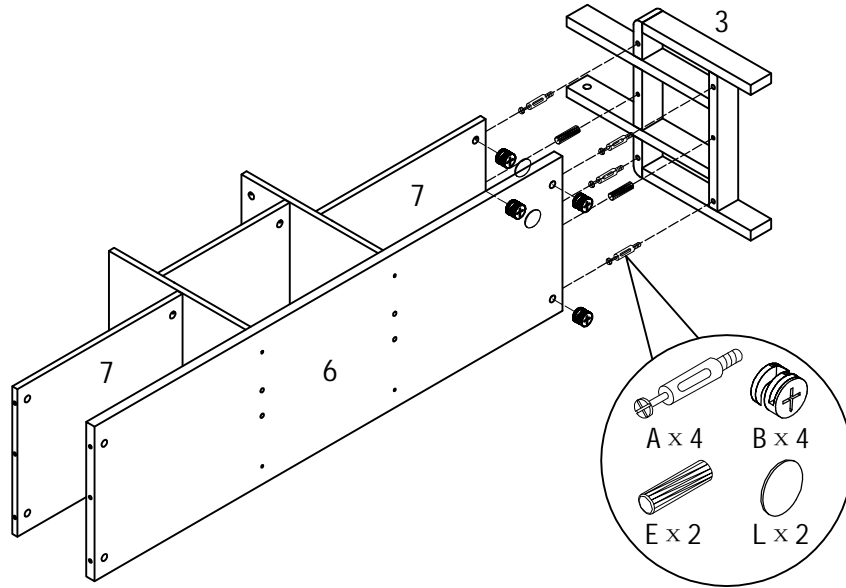


STEP 7 / ETAPE 7

 STEP 8 / ETAPE 8

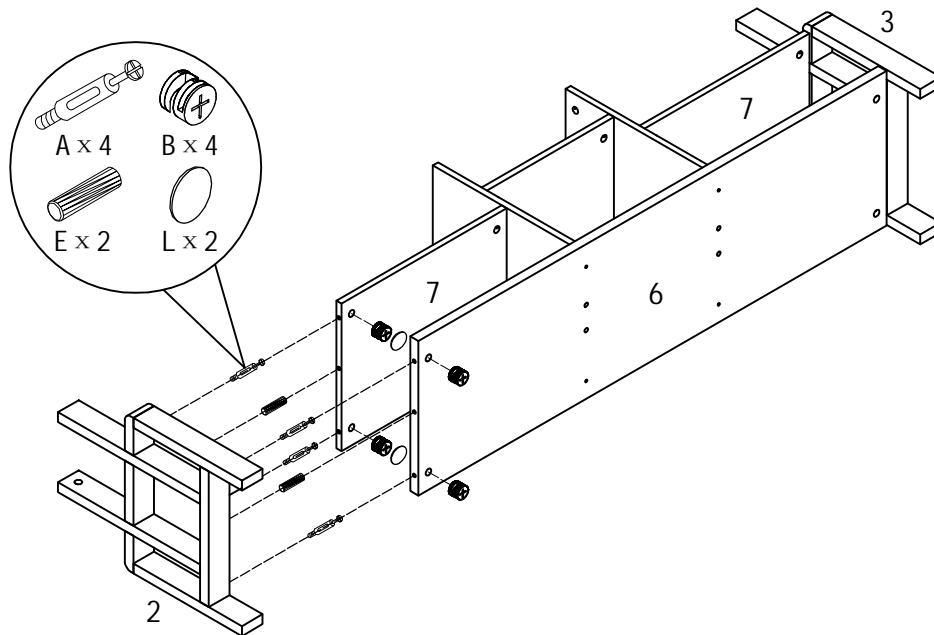


 ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

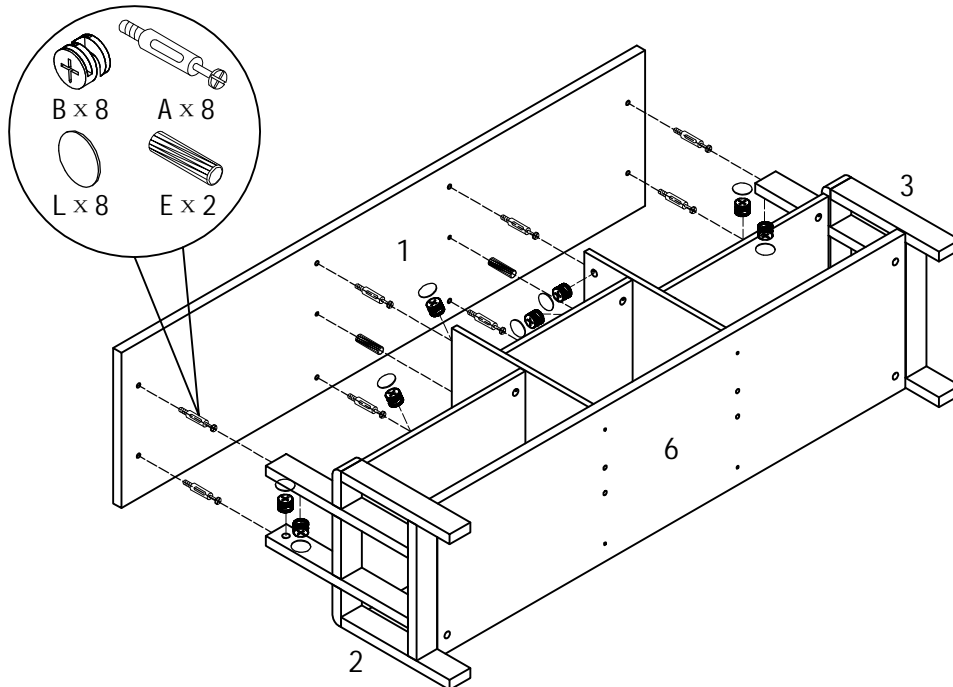

STEP 9 / ETAPE 9

 
STEP 10 / ETAPE 10

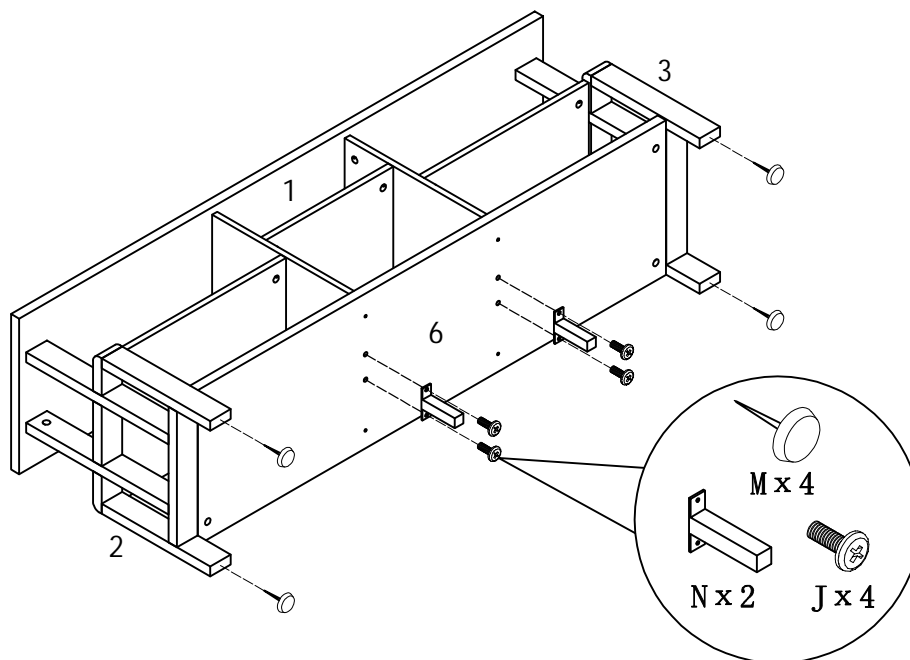



ITEM NO/NO ARTICLE:TV stand/Meuble TV  
192688

 ---

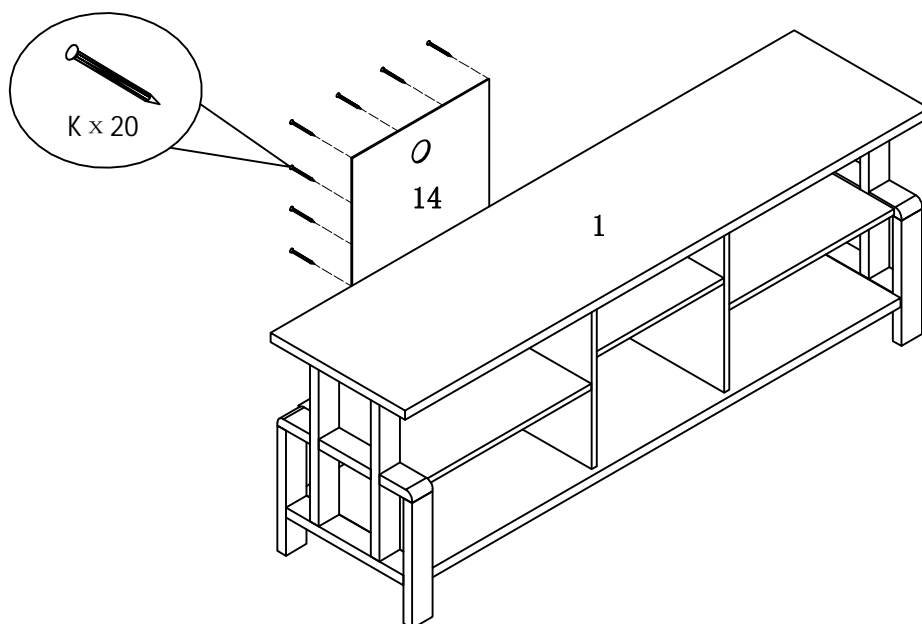

STEP 11 / ETAPE 11

STEP 12 / ETAPE 12

