
# Instruction d' Assemblage

#### Numéro d'article: ZX-381

La liste de la quincaillerie comprend les boulons et les rondelles installés en usine pour la fixation des rails latéraux. Remarque : Veuillez trouver les pieds et la boîte de quincaillerie à l'intérieur du carton des rails.

В	M	С	D	Е	F	Ι	J	N	Q	О	Р
9770	<b>ODD</b>	97700	0	0			9	$\Diamond$	9		
Boulon	Boulon	Boulon	Rondelle	Rondelle	Pieds en bois	Clé	Pied de support central				
Ф8*30ММ	Ф6*40ММ	Φ8*50MM	Ф6ММ	Ф8ММ	H=5CM	Ф8*80ММ	H=18CM	Embout central	Embout latéral	Rail de support central	Lattes en bois
12 PCS	6 PCS	4 PCS	6 PCS	16 PCS	4 PCS	1 PC	6 PCS	26 PCS	26 PCS	2 PCS	39 PCS

### Étapes d'assemblage:

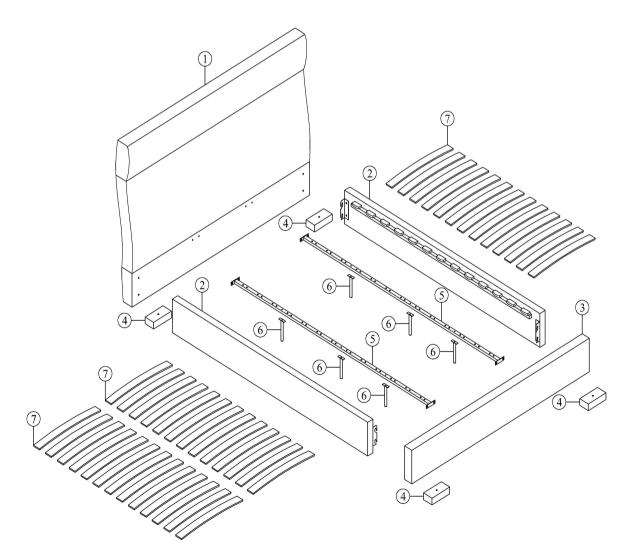

## **Assembly Instructions**


Item No: ZX-381

Hardware list includes factory installed bolts and washers for side rails attachment.

Note: please find bed feet and hardware box in side rail's carton.

В	M	C	D	Е	F	I	J	N	Q	О	P
9770	@Inimin	<b>O</b>	0	0			9	0	<b>\text{\ti}\text{\ti}}\text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\tint{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\texi}\text{\text{\text{\text{\text{\texi}\tint{\text{\ti}}}\tint{\text{\text{\texit{\text{\text{\texi}\tint{\text{\texi}\text{\</b>		
Bolt	Bolt	Bolt	Washer	Washer	Wooden feet	Bolt	Center Support leg				
Ф8*30ММ	Ф6*40ММ	Ф8*50ММ	Ф6ММ	Ф8ММ	H=5CM	Ф8*80ММ	H=20.5CM	Center Clip	End Clip	Center Support rail	Wooden Slats
12 PCS	6 PCS	4 PCS	6 PCS	16 PCS	4 PCS	1 PC	6 PCS	26 PCS	26 PCS	2 PCS	39 PCS

#### Assembly Steps:

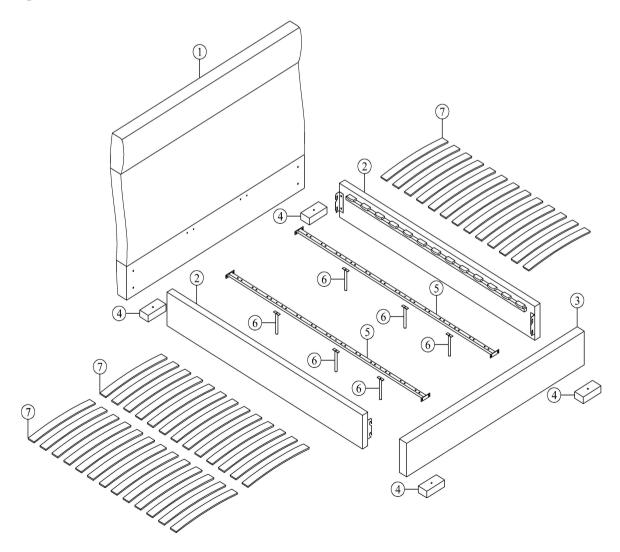



Récupérez les pieds et la quincaillerie dans le carton d'emballage fixé derrière la tête de lit.

Fixez les pieds du lit (F) à la tête de lit à l'aide de la clé (I), du boulon (C) et de la rondelle (E).

#### Step#2

Fixez les pieds du lit (F) au pied de lit à l'aide de la clé (I), du boulon (C) et de la rondelle (E).

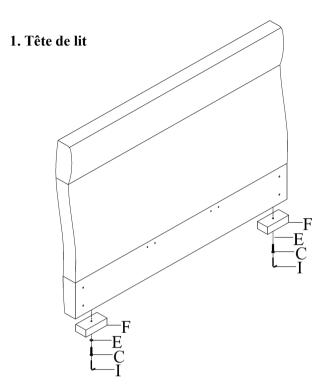


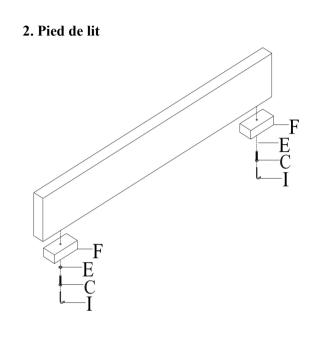

## Step#3

Desserrez le boulon (B) et la rondelle (E), fixez les rails latéraux à la tête et au pied de lit à l'aide de la clé (I), du boulon (B) et de la rondelle (E).

Retirez le boulon (B) et la rondelle (E), fixez le support central en acier (O) à la tête et au pied de lit à l'aide du boulon (B) et de la rondelle (E).

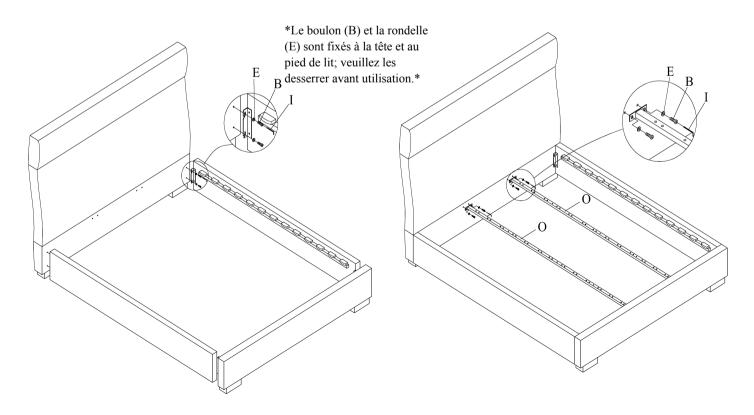



Retrieve feet and hardware from pack carton fasten behind the Headboard.

Attach bed feet (F) to headboard using Wrench (I), Bolt (C) and Washer (E).

#### Step#2

Attach bed feet (F) to footboard using Wrench (I), Bolt (C) and Washer (E).

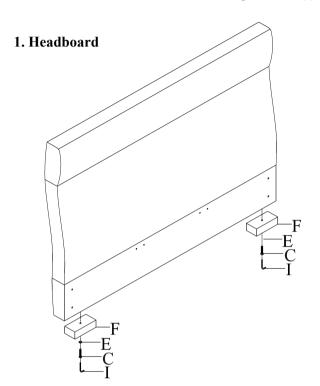


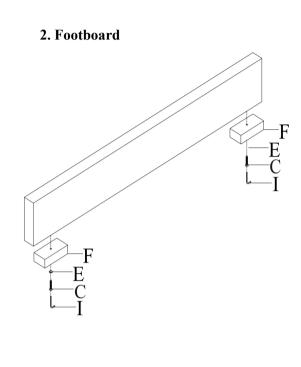


## Step#3

Loosen Bolt (A) & Washer (E), attach side Rails to haedboard and footboard using Wrench (I), Bolt (A) and Washer (E).

Remove Bolt (A) & Washer (E), attach steel center support (O) to the headboard and footboard using Bolt(A) and washer(E).

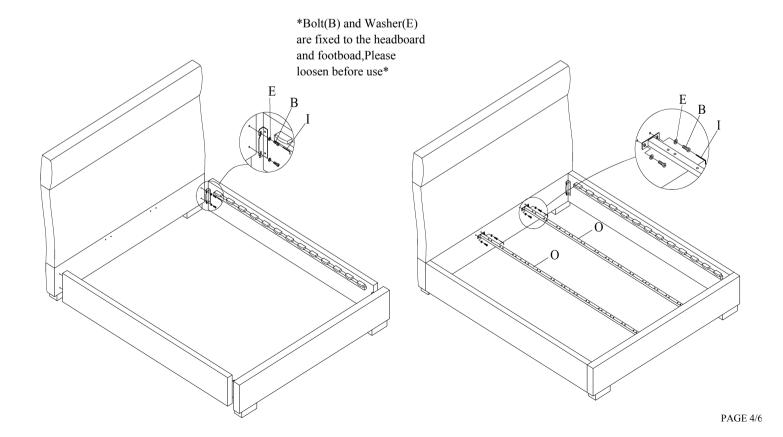

Fixez les pieds de support centraux (J) au support central (O) à l'aide de la clé (I), du boulon (M) et de la rondelle (D).

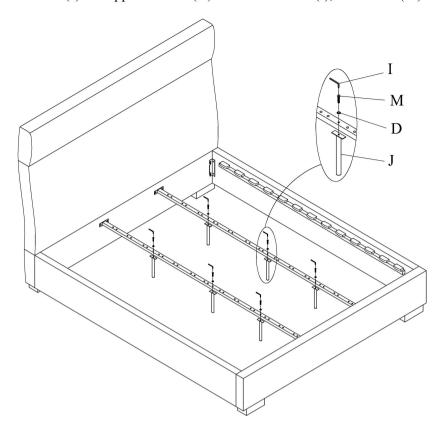


## Step#5

Déplacez/placez le lit en sa position finale dans la chambre.


Fixez le système de support des lattes courbées aux emboîtures de support des rails latéraux en acier de pleine longueur.

Veuillez d'abord placer les lattes dans l'embout latéral (Q), puis les relier à l'embout central (N), vérifiez que les lattes sont correctement insérées dans les embouts central (N) et latéral (Q).

Vérifiez que les pieds de support centraux sont perpendiculaires au sol pour un soutien optimal.

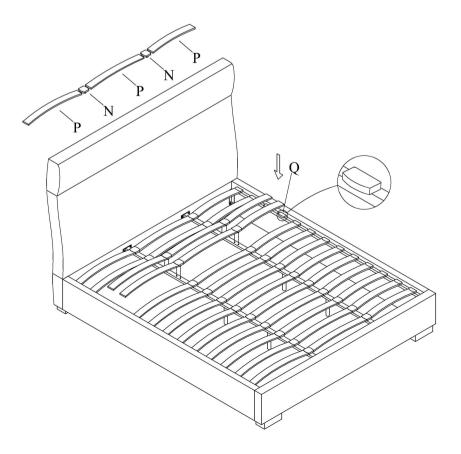

Attach center support legs (J) to the Center Support (O) using Wrench (I), Bolt (M) and Washer (D).

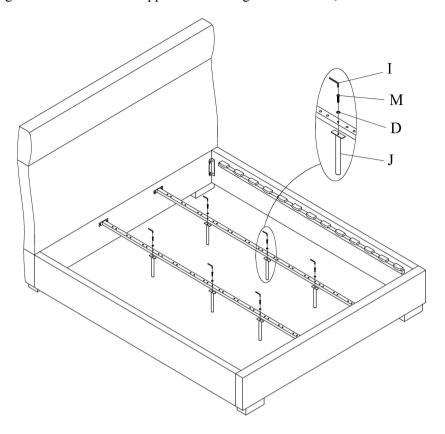

### Step#5

Move/place bed into final position in bedroom.

Attach curved slats support system to full length steel side rail support cleats.please put slats into end clip (Q) first, then connect with center clip (N), verify the slats are inserted properly into center clip (N) and end clip (Q). Verify the center support legs are perpendicular to the floor for full support.

