



ASSEMBLY INSTRUCTION / INSTRUCTION D'ASSEMBLAGE

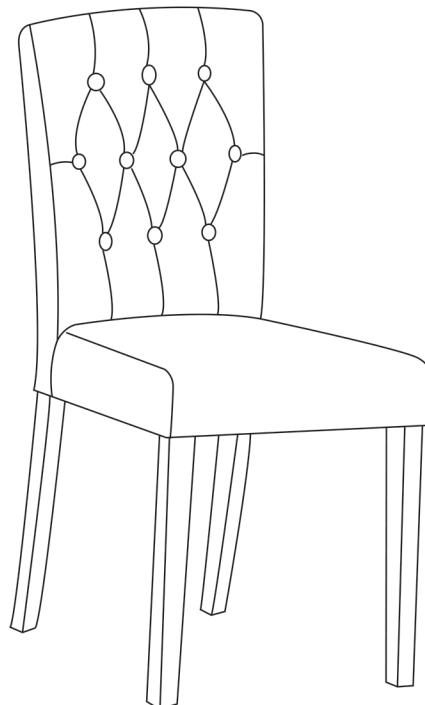

HERRAJES	CODE	PARTS	QTY.
	A	M8x50MM	1
	B	M8x60MM	4
	C	M8x90MM	4
	D	ALLEN KEY	1


1

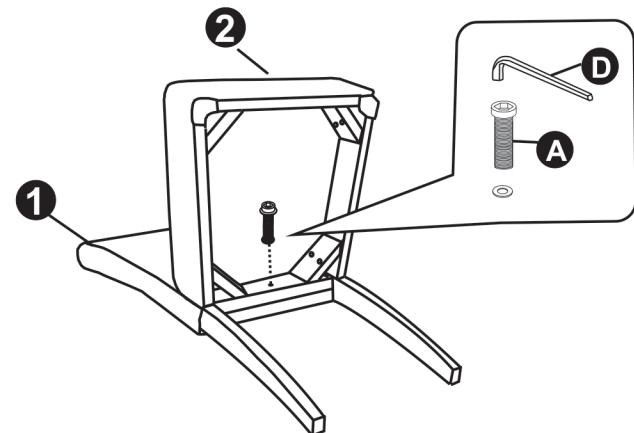

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

Insérez les vis dans les trous, serrez les vis, mais pas trop fort, 90% est satisfaisant.


2

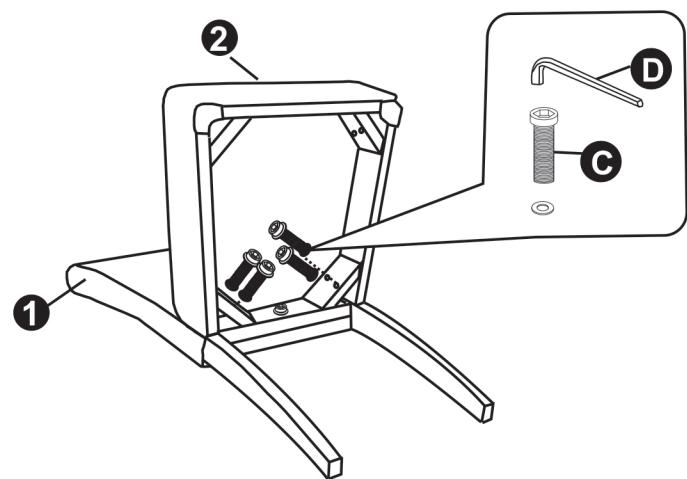

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

Insérez les vis dans les trous, serrez les vis, mais pas trop fort, 90% est satisfaisant.


3

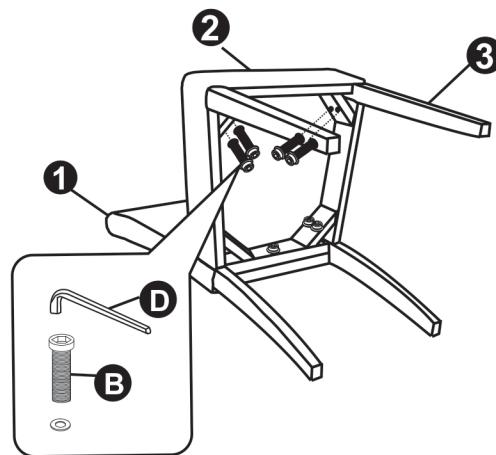

Put the screws in the holes, tight the screws,
but not too tight, 90% is ok.


Insérez les vis dans les trous, serrez les vis,
mais pas trop fort, 90% est satisfaisant.

5

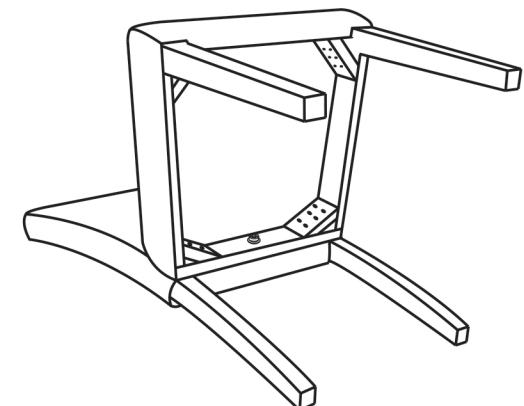


Tight all the screws to 100%.
Serrez toutes les vis à fond.

4

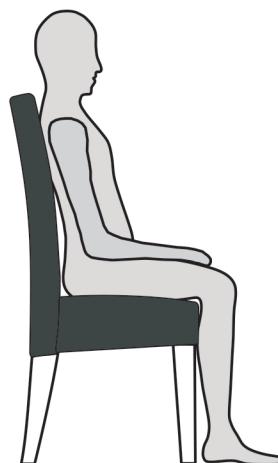

Then adjust the balance of the chair.
Réglez ensuite l'équilibre de la chaise.

6

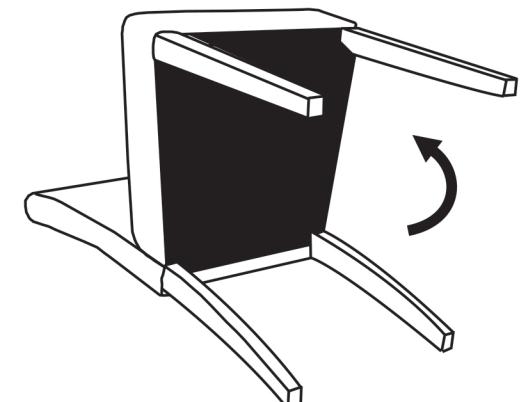

Stick the black part on the seat.
Collez la partie noire sur le siège.